
Digital Resources, Inc.


Anchor Assignment for every Stick

The Ordermation system has been extended to support Anchor definitions for any component (stick) in an assembly (frame).

Default Anchor assignments can be made in the elevation master definition.

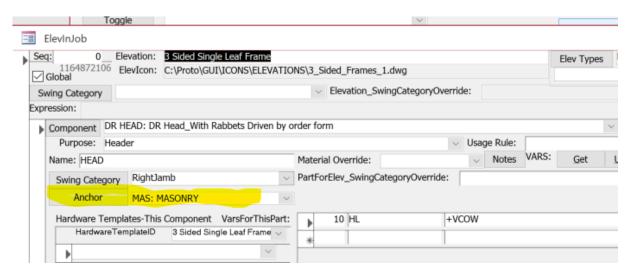

That definition will be copied to the component in any elevation variant based on the elevation master when the Get Elev Details function is performed.

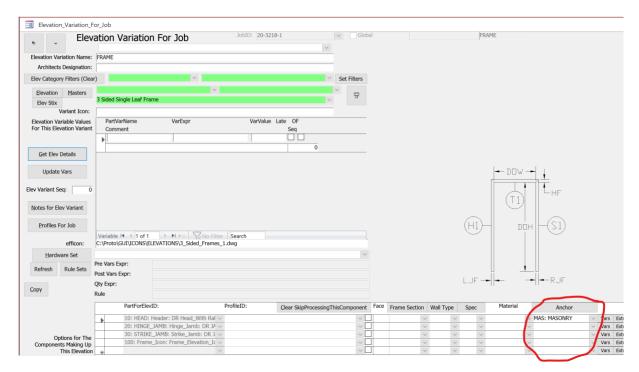

In the elevation variant screen, the default anchor assignments can be changed to whatever is actually needed in the current application.

In each line item, anchor associations may be made for the following mapped frame components:


Left Jamb: usually the Hinge Jamb

Right Jamb: usually the Strike Jamb in a single frame and the inactive Hinge Jamb in a pair.

Top Component: usually the Head. Bottom Component: usually the Sill.

The associations for the Top and Bottom components are new with the 20210824 release.



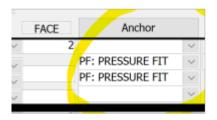

The Top slection box is for the TOP Anchor, then LEFT RIGHT BOTTOM

Ordermation Anchor For All sticks.doc